




ROMEX NORTH AMERICA  
 260 RIVERSIDE DRIVE  
 NORTH VANCOUVER, BC V7H 2M2  
 PHONE: (604) 913-1579  
 www.romexcanada.com

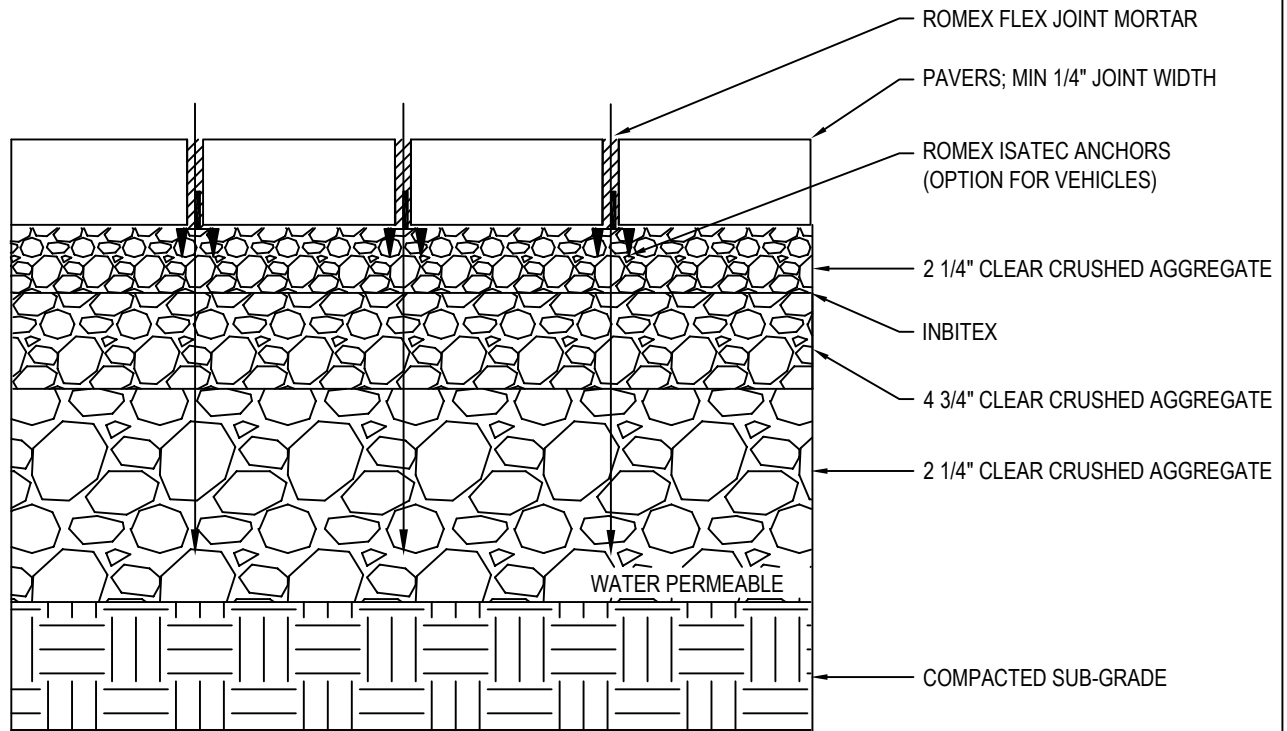

SECTION VIEW

ROMPOX® - FLEX JOINT:

**PREPARATION:** CLEAN OUT JOINTS TO A DEPTH OF AT LEAST 30MM (MINIMUM JOINT WIDTH 5MM). THE SURFACE TO BE JOINTED SHOULD BE CLEANED OUT OF ALL KINDS OF DIRT. ANY ADJOINING SURFACES THAT ARE NOT TO BE JOINTED SHOULD BE TAPED OFF.

**MIXING:** OPEN BUCKET, OPEN BOTTLES WITHIN AND POUR THE CONTENTS SLOWLY AND COMPLETELY INTO THE FILLER MATERIAL COMPONENT. START THE MIXING PROCESS. DO NOT ADD WATER! TOTAL MIXING TIME: ATLEAST 6 MINUTES.

**APPLICATION:** APPLY THE MIXED PAVED JOINTING MORTAR ONTO THE WELL DAMP SURFACE AND WORK IT CAREFULLY INTO THE JOINTS. IN ORDER TO USE THE OPTIMUM FLOW CAPACITY OF THE PAVING JOINT MORTAR, IT IS Poured ONTO 3 TO 4 AREAS OF THE JOINTING AREA.

ROMEX® - ISATEC ANCHORS


- ANCHORS ARE, HOT GALVANIZED, SPECIAL ALLOY, OIL HARDENED, RAL COLOURS AND STUDDED FORM.

- ANCHORS HAVE BEEN DEVELOPED FOR EACH TYPE OF DRIVING DYNAMIC LOAD TO ENSURE THE REDUCTION OF FUTURE DAMAGE TO SURFACES.

\*PLEASE SEE MANUFACTURER'S PRODUCT DATA SHEET FOR COMPLETE INFORMATION.

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWING.
3. THIS DRAWING IS INTENDED FOR USE BY ARCHITECTS, ENGINEERS, CONTRACTORS, CONSULTANTS AND DESIGN PROFESSIONALS FOR PLANNING PURPOSES ONLY. THIS DRAWING MAY NOT BE USED FOR CONSTRUCTION.
4. ALL INFORMATION CONTAINED HEREIN WAS CURRENT AT THE TIME OF DEVELOPMENT BUT MUST BE REVIEWED AND APPROVED BY THE PRODUCT MANUFACTURER TO BE CONSIDERED ACCURATE.
5. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT [www.CADdetails.com/info](http://www.CADdetails.com/info) AND ENTER REFERENCE NUMBER 5315-007

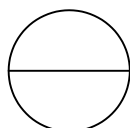

**ROMEX® FLEX JOINT MORTAR, ISATEC ANCHORS**

OVER INBITEX PERMEABLE PAVING (UNBOUND)